FL013B_ManualEN_111407.qxp 11/14/2007 11:36 AM Page I

RECHARGEABLE POWER OUTAGE LED LIGHT

INSTRUCTION MANUAL

Catalog Number FL013B

Thank you for choosing Black & Decker!
Go to www.BlackandDecker.com/NewOwner
to register your new product.

BEFORE RETURNING THIS PRODUCT FOR ANY REASON PLEASE CALL

1-800-544-6986

BEFORE YOU CALL, HAVE THE CATALOG No, AND DATE CODE AVAILABLE. IN MOST CASES, A **BLACK & DECKER** REPRESENTATIVE CAN RESOLVE THE PROBLEM OVER THE PHONE. IF YOU HAVE A SUGGESTION OR COMMENT, GIVE US A CALL. YOUR FEEDBACK IS VITAL TO BLACK & DECKER.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

Cat. # FL013B Form # 90528351
November 2007 Copyright © 2007 Black & Decker Printed in China

⚠ GENERAL SAFETY WARNINGS AND INSTRUCTIONS FOR ALL APPLIANCES

READ ALL INSTRUCTIONS

⚠ **WARNING:** Read and understand all instructions before operating product. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

- **AVOID DANGEROUS ENVIRONMENT.** Don't use appliances in damp or wet locations. Don't use appliances in the rain.
- **STORE IDLE APPLIANCES INDOORS.** When not in use, appliances should be stored indoors in dry place.
- **USE RIGHT APPLIANCE.** Do not use the appliance for any job except that for which it is intended.
- **DON'T ABUSE PLUG.** Never yank plug to disconnect from receptacle. Keep plug from heat and oil.
- **DISCONNECT APPLIANCES.** Disconnect the appliance from the power supply when not in use, before servicing, and when changing batteries.
- **GROUND FAULT CIRCUIT INTERRUPTER (GFCI)** protection should be provided on the circuits or outlets to be used. Receptacles are available having built in GFCI protection and may be used for this measure of safety.
- **USE OF ACCESSORIES AND ATTACHMENTS.** The use of any accessory or attachment not recommended for use with this appliance could be hazardous. Note: Refer to the accessory section of this manual for further details.
- **CHECK FOR DAMAGED PARTS.** Before further use of the appliance, check to determine that it will operate properly and perform its intended function. Check for breakage of parts, mounting, and any other conditions that may affect its operation. A part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Do not use appliance if switch does not turn it ON and OFF.

SAFETY GUIDELINES / DEFINITIONS

⚠ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

⚠ **WARNING: RISK OF UNSAFE OPERATION.** When using tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which tools and equipment are designed. Black & Decker strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed. Read and understand all warnings and operating instructions before using any tool or equipment.

IMPORTANT SAFETY INSTRUCTIONS

⚠ **WARNING:** This product or its plug contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

⚠ **WARNING: SHOCK HAZARD:** Do not operate unit with damaged plug; or if the unit has received a sharp blow, been dropped, or otherwise damaged in any way. Do not disassemble the unit; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire, and will void warranty.

⚠ **WARNING: EXPLOSION HAZARD: Batteries can explode, or leak, and can cause injury or fire. To reduce this risk:**

- The batteries in this unit are NOT replaceable and should be disposed of properly (or recycled). Do not dispose of batteries or unit containing batteries in fire.
- Keep batteries out of reach of children.

"Transporting batteries can possibly cause fires if the battery terminals inadvertently come in contact with conductive materials such as keys, coins, hand tools and the like. The US Department of Transportation Hazardous Material Regulations (HMR) actually prohibit transporting batteries in commerce or on airplanes (i.e. packed in suitcases and carryon luggage) UNLESS they are properly protected from short circuits. So when transporting individual batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit."

⚠ **CAUTION: TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE:**

- DO NOT expose this unit to extremely high temperatures.
- DO NOT position the light so it is subject to extreme heat, undue stress or tearing; or so that it becomes a hazard.
- This light is moisture-resistant, NOT waterproof. Do not submerge in liquids of any kind.
- To reduce the risk of damage, be sure the unit is mounted in a secure and stable manner.
- Read And Understand This Instruction Manual Before Using This Unit.

SAVE THESE INSTRUCTIONS

INTRODUCTION

Thank you for choosing the ***FL013B Rechargeable Power Outage LED Light***. Please read this manual carefully before use to ensure optimum performance and avoid damage to the unit.

FEATURES

- Ideal for temporary power outages
- Powerful, magnified 3 LED beam
- Automatically lights when power goes off
- Runs on three (3) AAA nonreplaceable Ni-Cad rechargeable batteries (included)
- LED Charging Indicators

Controls and Indicators

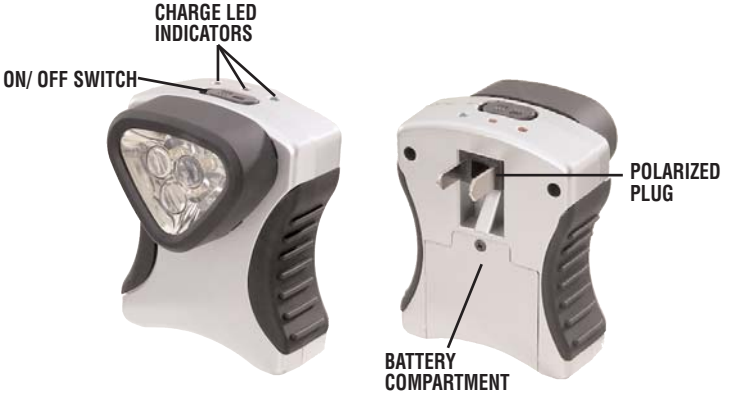

OPERATING INSTRUCTIONS

Preparing the Unit for Use

This unit is delivered in a partially charged state. Light must charge at least 35 hours prior to first use for maximum charge to occur. The light charges automatically when it is plugged into any standard (120V AC 60Hz) wall outlet. The light is fully charged when all Charge LED Indicators are lit.

When the light begins to dim, recharge for at least 32 hours to achieve maximum run time.

Using the Light in Powerfail Mode

1. Lift the Polarized Plug up to the “out” position and plug the light into any standard (120V AC 60Hz) wall outlet. Charge LED Indicators will light.
2. When a power loss occurs, the fully charged Rechargeable Power Outage LED Light will illuminate automatically. With a full charge, the light will run up to 5 hours in Powerfail Mode.

Using the Light as a Flashlight

1. To use as a flashlight, unplug the light from the wall outlet, push the Polarized Plug to the down (or “in”) position.
2. Move ON/OFF Switch to the On position.

Note: Moving the ON/OFF Switch to the Off position turns the light Off.

CARE AND MAINTENANCE

This light is weather-resistant, NOT waterproof. Never submerge this light in water. If it gets dirty, unplug the light from the outlet and gently clean the outer surfaces with a soft cloth moistened with a mild solution of water and detergent. Make sure the Polarized Plug is dry before inserting into electrical outlet

Safe Battery Disposal

The batteries contained in this unit are NOT replaceable. At the end of battery life, remove from light (refer to the following directions) and either dispose of properly or recycle. For more information on recycling these batteries, call toll-free (800) 822-8837.

To remove batteries (for disposal or recycling purposes only):

1. Make sure the light is unplugged from wall outlet.
2. Remove the retaining screw holding the battery cover in place.
3. Pull gently down on the cover to remove.

⚠ **WARNINGS: TO REDUCE THE RISK OF INJURY / EXPLOSION:**

- Do not dispose of batteries in fire as this may result in an explosion.
- Do not dispose of this light in fire as batteries inside this product may explode or leak.
- Do not expose light containing batteries to fire or intense heat as it may explode.

Accessories

Recommended accessories for use with your light are available from your local dealer or authorized service center. If you need assistance regarding accessories, please call: 1-800-544-6986.

⚠ **WARNING:** The use of any accessory not recommended for use with this light could be hazardous.

SERVICE INFORMATION

All Black & Decker Service Centers are staffed with trained personnel to provide customers with efficient and reliable power tool service. Whether you need technical advice, repair, or genuine factory replacement parts, contact the Black & Decker location nearest you. To find your local service location, refer to the yellow page directory under "Tools—Electric" or call: 1-800-544-6986 or visit www.blackanddecker.com.

FULL TWO-YEAR HOME USE WARRANTY

Black & Decker (U.S.) Inc. warrants this product for two years against any defects in material or workmanship. The defective product will be replaced or repaired at no charge in either of two ways.

The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided that the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges (usually 30 to 90 days after the sale). Proof of purchase may be required. Please check with the retailer for their specific return policy regarding returns that are beyond the time set for exchanges.

The second option is to take or send the product (prepaid) to a Black & Decker owned or authorized Service Center for repair or replacement at our option. Proof of purchase may be required. Black & Decker owned and authorized Service Centers are listed under "Tools-Electric" in the yellow pages of the phone directory and on our website www.blackanddecker.com.

This warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state or province to province. Should you have any questions, contact the manager of your nearest Black & Decker Service Center. This product is not intended for commercial use.

FREE WARNING LABEL REPLACEMENT: If your warning labels become illegible or are missing, call 1-800-544-6986 for a free replacement.

SPECIFICATIONS

Bulb Life:	50,000 hours
Batteries:	3 AAA nonreplaceable Ni-Cad batteries (included)
Run Time:	5 hours

Imported by
Black & Decker (U.S.) Inc.,
701 E. Joppa Rd.
Towson, MD 21286 U.S.A.

See 'Tools-Electric' – Yellow Pages – for Service & Sales

RD111407

FL0013B_ManualSP_111207.qxp 11/12/2007 4:58 PM Page I

BLACK&DECKER®

RECHARGEABLE POWER OUTAGE LED LIGHT

INSTRUCTION MANUAL

Catalog Number FL0013B

Thank you for choosing Black & Decker!
Go to www.BlackandDecker.com/NewOwner
to register your new product.

BEFORE RETURNING THIS PRODUCT FOR ANY REASON PLEASE CALL

1-800-544-6986

BEFORE YOU CALL, HAVE THE CATALOG No, AND DATE CODE AVAILABLE. IN MOST CASES, A **BLACK & DECKER** REPRESENTATIVE CAN RESOLVE THE PROBLEM OVER THE PHONE. IF YOU HAVE A SUGGESTION OR COMMENT, GIVE US A CALL. YOUR FEEDBACK IS VITAL TO BLACK & DECKER.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

Cat. # FL0013B Form # 90528351
November 2007 Copyright © 2007 Black & Decker Printed in China

⚠ GENERAL SAFETY WARNINGS AND INSTRUCTIONS FOR ALL APPLIANCES

READ ALL INSTRUCTIONS

⚠ **WARNING:** Read and understand all instructions before operating product. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

- **AVOID DANGEROUS ENVIRONMENT.** Don't use appliances in damp or wet locations. Don't use appliances in the rain.
- **STORE IDLE APPLIANCES INDOORS.** When not in use, appliances should be stored indoors in dry place.
- **USE RIGHT APPLIANCE.** Do not use the appliance for any job except that for which it is intended.
- **DON'T ABUSE PLUG.** Never yank plug to disconnect from receptacle. Keep plug from heat and oil.
- **DISCONNECT APPLIANCES.** Disconnect the appliance from the power supply when not in use, before servicing, and when changing batteries.
- **GROUND FAULT CIRCUIT INTERRUPTER (GFCI)** protection should be provided on the circuits or outlets to be used. Receptacles are available having built in GFCI protection and may be used for this measure of safety.
- **USE OF ACCESSORIES AND ATTACHMENTS.** The use of any accessory or attachment not recommended for use with this appliance could be hazardous. Note: Refer to the accessory section of this manual for further details.
- **CHECK FOR DAMAGED PARTS.** Before further use of the appliance, check to determine that it will operate properly and perform its intended function. Check for breakage of parts, mounting, and any other conditions that may affect its operation. A part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Do not use appliance if switch does not turn it ON and OFF.

SAFETY GUIDELINES / DEFINITIONS

⚠ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

⚠ **WARNING: RISK OF UNSAFE OPERATION.** When using tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which tools and equipment are designed. Black & Decker strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed. Read and understand all warnings and operating instructions before using any tool or equipment.

IMPORTANT SAFETY INSTRUCTIONS

⚠ **WARNING:** This product or its plug contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

⚠ **WARNING: SHOCK HAZARD:** Do not operate unit with damaged plug; or if the unit has received a sharp blow, been dropped, or otherwise damaged in any way. Do not disassemble the unit; take it to a qualified service technician when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire, and will void warranty.

⚠ **WARNING: EXPLOSION HAZARD: Batteries can explode, or leak, and can cause injury or fire. To reduce this risk:**

- The batteries in this unit are NOT replaceable and should be disposed of properly (or recycled). Do not dispose of batteries or unit containing batteries in fire.
- Keep batteries out of reach of children.

"Transporting batteries can possibly cause fires if the battery terminals inadvertently come in contact with conductive materials such as keys, coins, hand tools and the like. The US Department of Transportation Hazardous Material Regulations (HMR) actually prohibit transporting batteries in commerce or on airplanes (i.e. packed in suitcases and carryon luggage) UNLESS they are properly protected from short circuits. So when transporting individual batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit."

⚠ **CAUTION: TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE:**

- DO NOT expose this unit to extremely high temperatures.
- DO NOT position the light so it is subject to extreme heat, undue stress or tearing; or so that it becomes a hazard.
- This light is moisture-resistant, NOT waterproof. Do not submerge in liquids of any kind.
- To reduce the risk of damage, be sure the unit is mounted in a secure and stable manner.
- Read And Understand This Instruction Manual Before Using This Unit.

SAVE THESE INSTRUCTIONS

INTRODUCTION

Thank you for choosing the ***FL0013B Rechargeable Power Outage LED Light***. Please read this manual carefully before use to ensure optimum performance and avoid damage to the unit.

FEATURES

- Ideal for temporary power outage or emergencies
- Powerful, magnified 3 LED beam
- Automatically lights when power goes off
- Runs on three (3) AA nonreplaceable Ni-Cad rechargeable batteries (included)
- LED Charging Indicators

Controls and Indicators

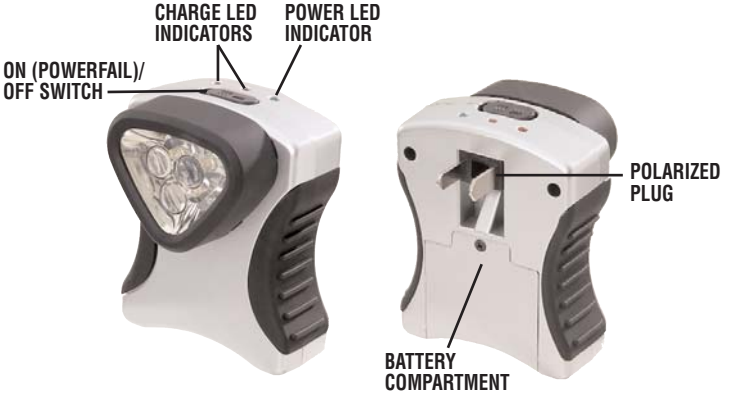

OPERATING INSTRUCTIONS

Preparing the Unit for Use

This unit is delivered in a partially charged state. Light must charge at least 35 hours prior to first use for maximum charge to occur. The light charges automatically when the On (Powerfail)/Off Switch is in the On position and the light is plugged into any standard (120V AC 60Hz) wall outlet. The light is fully charged when both red Charge LED Indicators are lit.

When only one red Charge LED Indicator lights when the On (Powerfail)/Off Switch is in the On position and the light is unplugged from an outlet, the batteries need recharging. Recharge for at least 32 hours to achieve maximum run time.

Using the Light in Powerfail Mode

1. Move On (Powerfail)/Off Switch to the On position.
2. Lift the Polarized Plug up to the “out” position and plug the light into any standard (120V AC 60Hz) wall outlet. Both red Charge LED Indicators and the green Power LED Indicator will light.
3. When a power loss occurs, the fully charged Rechargeable Power Outage LED Light will illuminate automatically. With a full charge, the light will run up to 10 hours in Powerfail Mode.

Using the Light as a Flashlight

1. To use as a flashlight, unplug the light from the wall outlet, push the Polarized Plug to the down (or “in”) position.
2. Move On (Powerfail)/Off Switch to the On position.

Note: Moving the On (Powerfail)/Off Switch to the Off position turns the light Off.

CARE AND MAINTENANCE

This light is weather-resistant, NOT waterproof. Never submerge this light in water. If it gets dirty, unplug the light from the outlet and gently clean the outer surfaces with a soft cloth moistened with a mild solution of water and detergent. Make sure the Polarized Plug is dry before inserting into electrical outlet

Safe Battery Disposal

The batteries contained in this unit are NOT replaceable. At the end of battery life, remove from light (refer to the following directions) and either dispose of properly or recycle. For more information on recycling these batteries, call toll-free (800) 822-8837.

To remove batteries (for disposal or recycling purposes only):

1. Make sure the light is unplugged from wall outlet.
2. Remove the retaining screw holding the battery cover in place.
3. Pull gently down on the cover to remove.

⚠ **WARNINGS: TO REDUCE THE RISK OF INJURY / EXPLOSION:**

- Do not dispose of batteries in fire as this may result in an explosion.
- Do not dispose of this light in fire as batteries inside this product may explode or leak.
- Do not expose light containing batteries to fire or intense heat as it may explode.

Accessories

Recommended accessories for use with your light are available from your local dealer or authorized service center. If you need assistance regarding accessories, please call: 1-800-544-6986.

⚠ **WARNING:** The use of any accessory not recommended for use with this light could be hazardous.

SERVICE INFORMATION

All Black & Decker Service Centers are staffed with trained personnel to provide customers with efficient and reliable power tool service. Whether you need technical advice, repair, or genuine factory replacement parts, contact the Black & Decker location nearest you. To find your local service location, refer to the yellow page directory under "Tools—Electric" or call: 1-800-544-6986 or visit www.blackanddecker.com.

FULL TWO-YEAR HOME USE WARRANTY

Black & Decker (U.S.) Inc. warrants this product for two years against any defects in material or workmanship. The defective product will be replaced or repaired at no charge in either of two ways.

The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided that the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges (usually 30 to 90 days

after the sale). Proof of purchase may be required. Please check with the retailer for their specific return policy regarding returns that are beyond the time set for exchanges.

The second option is to take or send the product (prepaid) to a Black & Decker owned or authorized Service Center for repair or replacement at our option. Proof of purchase may be required. Black & Decker owned and authorized Service Centers are listed under "Tools-Electric" in the yellow pages of the phone directory and on our website www.blackanddecker.com.

This warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state or province to province. Should you have any questions, contact the manager of your nearest Black & Decker Service Center. This product is not intended for commercial use.

FREE WARNING LABEL REPLACEMENT: If your warning labels become illegible or are missing, call 1-800-544-6986 for a free replacement.

SPECIFICATIONS

Bulb Life:	XXX hours
Batteries:	3 AA nonreplaceable Ni-Cad batteries (included)
Run Time:	10 hours

Imported by
Black & Decker (U.S.) Inc.,
701 E. Joppa Rd.
Towson, MD 21286 U.S.A.

See 'Tools-Electric'
– Yellow Pages –
for Service & Sales

RD111207